

## Installation and Operating Guide | Warranty

Model Number | DVT216 (Speakers: FE-5620TE/FE-5620WE) | DVD Home Cinema System



## Safety Precautions



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

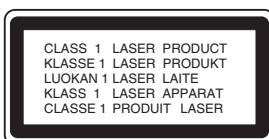

### CAUTION:

This Digital Video Disc Receiver employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location-see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



### REGULATORY INFORMATION:

#### FCC Part 15

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**FCC COMPLIANCE:** The responsible party for this product's compliance is:

Zenith Electronics Corporation, 2000 Millbrook Drive,  
Lincolnshire, IL 60069, USA  
Phone: 1-847-391-7000.



### Notes on copyrights:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission.

This product is equipped with copy protection measures developed by Macrovision. Copy protection signals are recorded on some discs. When recording these discs on a VCR, picture noise will appear during playback.

This product incorporates copyright protection technology that is protected by certain U.S. patent claims and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

**SERIAL NUMBER:** The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. **DVT216**

Serial No. \_\_\_\_\_


# IMPORTANT SAFETY INSTRUCTIONS

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use, and servicing.

This unit does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

- 1. Read these instructions.** - All these safety and operating instructions should be read before the product is operated.
- 2. Keep these instructions.** - The safety, operating and use instructions should be retained for future reference.
- 3. Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow all instructions.** - All operating and use instructions should be followed.
- 5. Do not use this apparatus near water.** - For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; or near a swimming pool; and like.
- 6. Clean only with dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over- heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11. Only use attachments/accessories specified by the manufacturer.**
- 
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.**
- 14. Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Table of Contents

### Introduction

<b>Safety Precautions</b> .....	<b>2</b>
<b>Important Safety Instructions</b> .....	<b>3</b>
<b>Before Use</b> .....	<b>5-6</b>
Playable Discs .....	5
Precautions .....	6
Notes on Discs .....	6
About Symbols .....	6
<b>Front Panel and Display Window</b> .....	<b>7</b>
<b>Remote Control Buttons</b> .....	<b>8</b>
<b>Rear Panel Overview</b> .....	<b>9</b>

### Preparation

<b>Connections</b> .....	<b>10-12</b>
TV Connections .....	10
Optional Equipment Connections .....	11
Antenna Connections .....	11
Speaker System Connections .....	12
Speaker Positioning .....	12
<b>Before Operation</b> .....	<b>13</b>
Mini Glossary for Sound Mode .....	13
Sound Mode .....	14
Sound Level .....	14
Test Tone .....	14
Speaker Sound Delay Time Setting .....	15
Setting the Delay Time in Dolby Digital and Dolby Pro Logic (II) mode .....	15
General Explanation .....	16
On-Screen Display .....	16
Initial Settings .....	17-18
• <i>Initial Settings General Operation</i> .....	17
• <i>Language</i> .....	17
• <i>Picture</i> .....	17
• <i>Parental Control</i> .....	18

### Operation

<b>Radio Operation</b> .....	<b>19-20</b>
Presetting Radio Stations .....	19
Listening to the Radio .....	19
Sleep Timer Setup .....	20
Dimmer .....	20
Mute .....	20
Using Headphone Jack .....	20
Selecting Input Source .....	20

### DVD Operation .....

<b>Playing a DVD</b> .....	<b>21</b>
<b>General Features</b> .....	<b>21</b>
• <i>Moving to another TITLE</i> .....	21
• <i>Moving to another CHAPTER/TRACK</i> .....	21
• <i>Slow Motion</i> .....	21
• <i>Still Picture and Frame-by-Frame Playback</i> .....	22
• <i>Search</i> .....	22
• <i>Repeat</i> .....	22
• <i>Repeat A-B</i> .....	22
• <i>Time Search</i> .....	22
• <i>Zoom</i> .....	23
• <i>Marker Search</i> .....	23

<b>Special DVD Features</b> .....	<b>23</b>
• <i>Title Menu</i> .....	23
• <i>Disc Menu</i> .....	23
• <i>Camera Angle</i> .....	23
• <i>Changing the Audio Language</i> .....	23
• <i>Subtitles</i> .....	23
<b>Operation with Audio CD and MP3 Disc</b> .....	<b>24</b>
Playing an Audio CD and MP3 Disc .....	24
• <i>Pause</i> .....	24
• <i>Moving to another Track</i> .....	24
• <i>Repeat Track/All/Off</i> .....	24
• <i>Search</i> .....	24
• <i>Random</i> .....	24
• <i>Repeat A-B</i> .....	24
• <i>Changing the Audio Channel</i> .....	24
<b>Programmed Playback</b> .....	<b>25</b>
Programmed Playback with Audio CD and MP3 Disc .....	25
<b>Additional Information</b> .....	<b>26</b>
Last Condition Memory .....	26
Screen Saver .....	26
Video Mode Setting .....	26
Notes on MP3 Discs .....	26

### Reference

<b>Troubleshooting</b> .....	<b>27-28</b>
<b>Language Code List</b> .....	<b>29</b>
<b>Country Code List</b> .....	<b>30</b>
<b>Specifications</b> .....	<b>31</b>
<b>Warranty</b> .....	<b>Back Cover</b>

### About the symbols for instructions



Indicates hazards likely to cause harm to the unit itself or other material damage.



Indicates special operating features of this unit.





Indicates tips and hints for making the task easier.

*Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.*

*Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other worldwide patents issued and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Copyright 1996 Digital Theater Systems, Inc. All rights reserved.*

## Before Use

### Playable Discs

	DVD (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit can play a CD-R or CD-RW that contains audio titles or MP3 files.

#### Notes

- Depending on the conditions of the recording equipment or the CD-R/RW disc itself, some CD-R/RW discs cannot be played on the unit.
- The unit cannot play CD-R/RW discs that contain no data, or contain different kinds of formatted data other than MP3 and CD-DA data.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregular shaped CDs (e.g., heart-shaped or octagonal). Doing so may result in malfunctions.

#### Notes on DVDs

Some playback operations of DVDs may be intentionally fixed by software manufacturers. As this unit plays DVDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available, or other functions may be added. Refer also to the instructions supplied with the DVDs. Some DVDs made for business purposes may not be played on the unit.

#### Regional code of the DVD receiver and DVDs

This DVD receiver is designed and manufactured for playback of region “1” encoded DVD software. The region code on the labels of some DVD discs indicates which type of receiver can play those discs. This unit can play only DVD discs labeled “1” or “ALL”. If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.



#### Note on DTS-encoded CDs

When playing DTS-encoded CD's, an excessive audio level may be heard from the analog stereo output. To avoid possible damage to the audio system, turn down the volume before playing back such discs, adjust the volume gradually, and keep the volume level low. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output of the unit.

### Disc-related terms

#### Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album.

Each title is assigned a title reference number enabling you to locate it easily.

#### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number, enabling you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

#### Track (Audio CD only)

Sections of a musical piece on an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

## Before Use (Cont'd)

### Precautions

#### Handling the unit

##### Shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

##### Setting a place for the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

##### Keeping the cabinet surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

##### Installing

- Do not install the unit in a confined space, such as a bookcase or built-in cabinet.
- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not place heavy objects on the unit.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

##### To obtain a clear picture

The DVD receiver is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.


### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc.

Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.

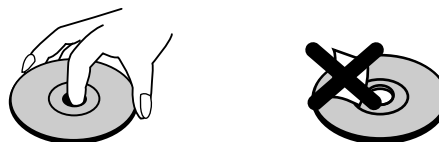


#### Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

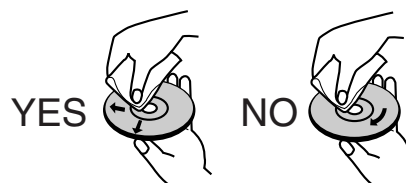

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

### About Symbols




#### About the symbol display

“” may appear on the TV screen during operation.


This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

#### About the disc symbols for instructions

A section whose title has one of the following symbols is applicable only to the disc represented by the symbol.


-  DVD
-  Audio CDs
-  MP3 disc

## Front Panel and Display Window

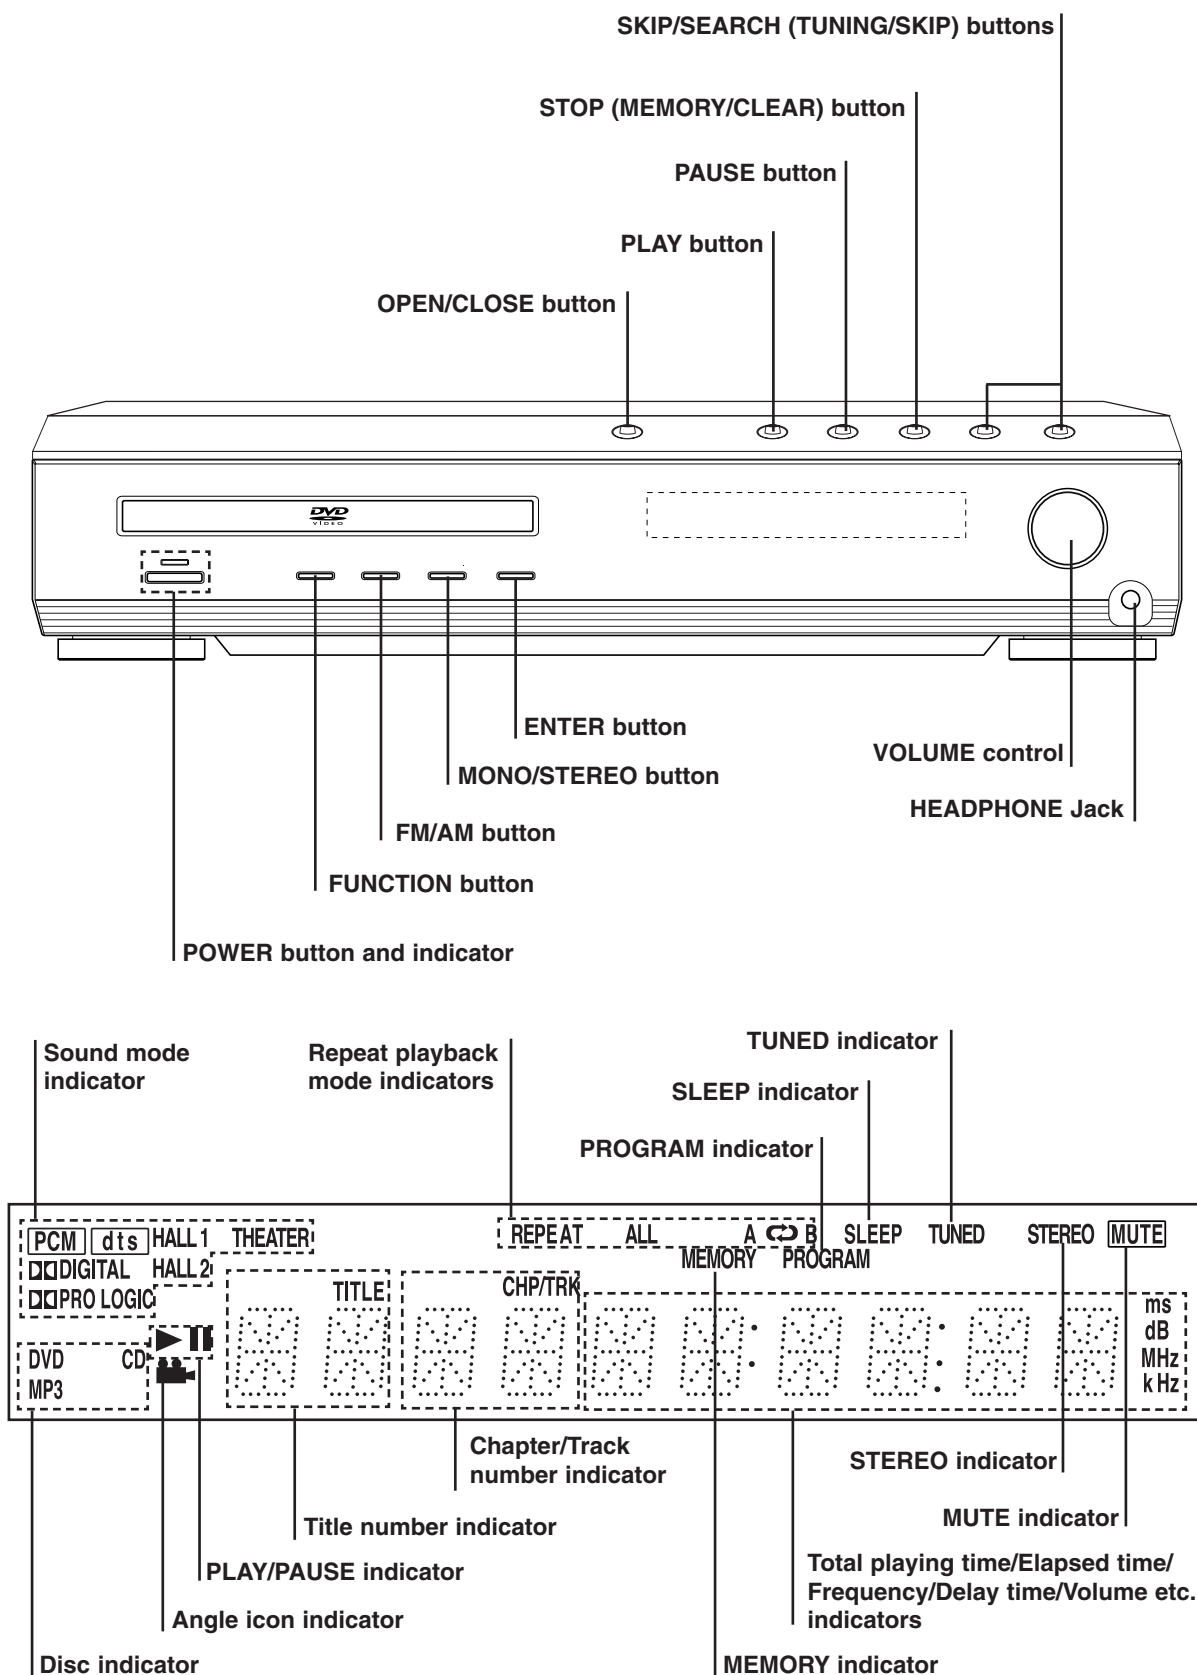



## Remote Control Buttons

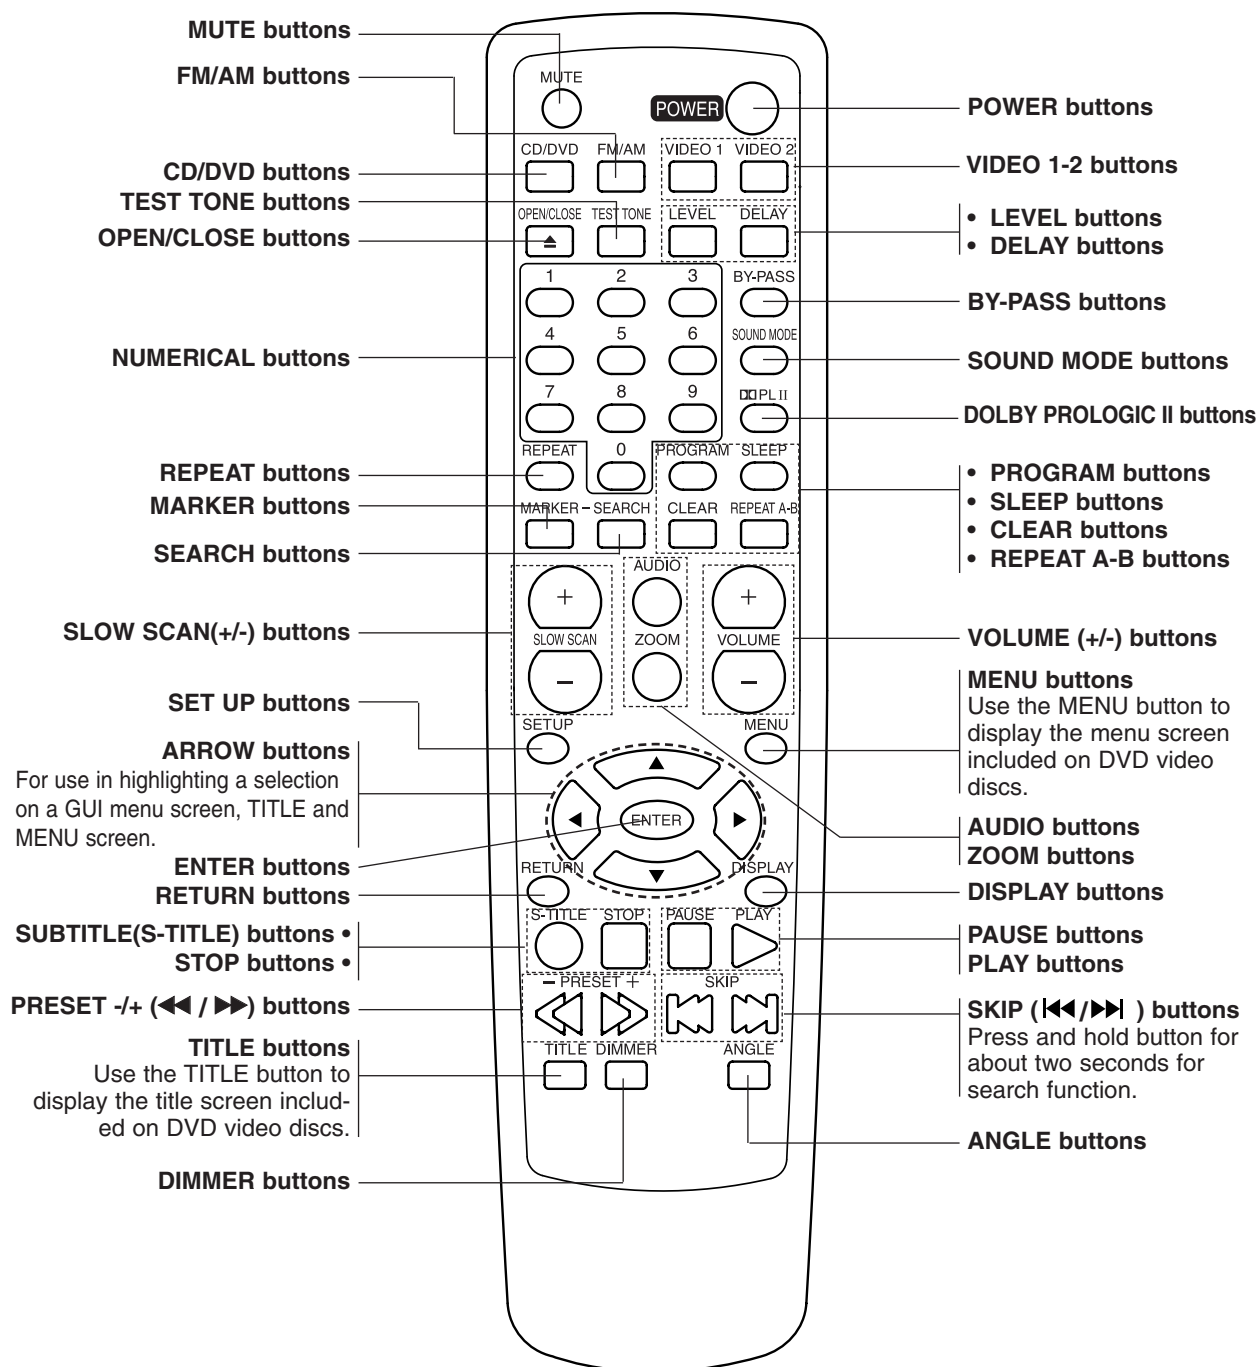


### Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor
 
### Remote Control Battery installation

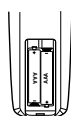

Remove the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with **+** and **-** aligned correctly.




#### Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).




## Rear Panel Overview

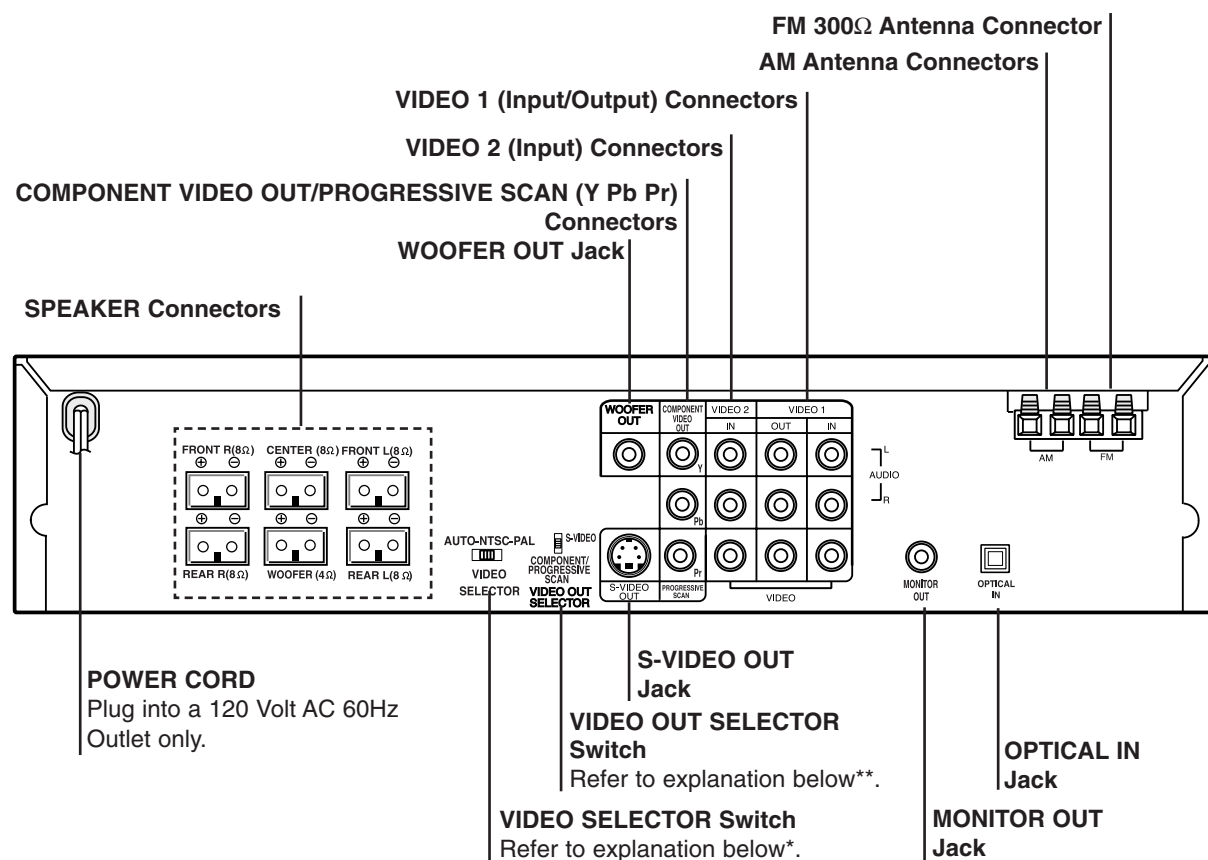

### Dust Protection Cap

 Remove the dust protection cap from the OPTICAL DIGITAL OUT jack and connect the optical digital cable (not supplied) securely so that the configurations of both the cable and the connector match. Keep the dust protection cap and always reattach the cap when not using the connector to protect against dust intrusion.

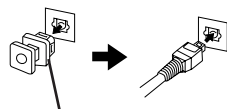

Dust protection cap



### Caution

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.



### Caution

When you select the function mode VIDEO1 using the VIDEO1 button on the remote control, the signal is output from the front L/R speakers, but not from the VIDEO1 VIDEO OUT and AUDIO OUT L/R connectors.

### \* VIDEO SELECTOR Switch

You can enjoy NTSC or PAL discs by setting the VIDEO SELECTOR switch to choose the appropriate system.

**PAL:** Select when DVD receiver is connected with PAL-TV.

**NTSC:** Select when DVD receiver is connected with NTSC-TV.

**AUTO:** Select when DVD receiver is connected with Multi system TV.


- When the selected System Select switch does not coincide with the system of your TV, normal color picture may not be displayed.
- Set System Select switch when the power is turned off.

### \*\* VIDEO OUT SELECTOR Switch

Select either S-VIDEO OUT or COMPONENT/PROGRESSIVE SCAN VIDEO OUT, depending on how you connected the DVD Receiver to the TV.

## Connections

### TV Connections

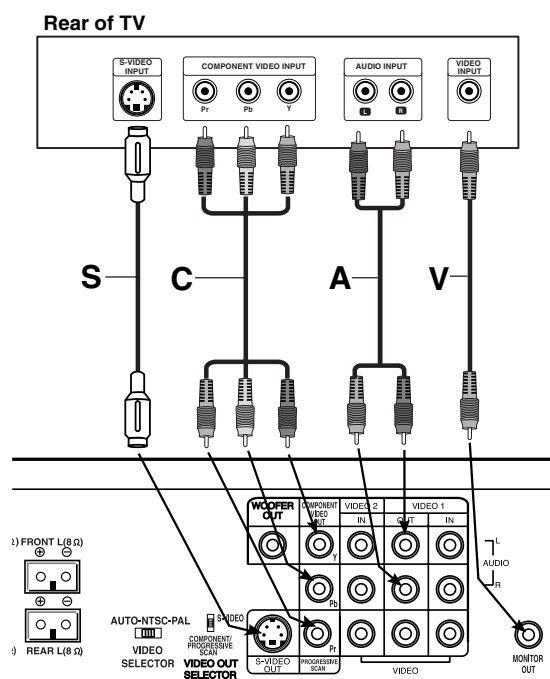

- Make one of the following connections, depending on the capabilities of your existing equipment.
- When using the COMPONENT VIDEO OUT/PROGRESSIVE SCAN jacks, set the VIDEO OUT SELECTOR switch to COMPONENT/PROGRESSIVE. When using the S-VIDEO OUT jack, set the VIDEO OUT SELECTOR switch to S-VIDEO.

#### Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

#### Caution

- Make sure the DVD Receiver is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your DVD Receiver to TV via your VCR. The DVD image could be distorted by the copy protection system.

#### Video connection

- 1 Connect the MONITOR OUT jack on the DVD Receiver to the video in jack on the TV using the video cable supplied (**V**).
- 2 Connect the Left and Right AUDIO OUT jacks of the DVD Receiver to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

#### S-Video connection

- 1 Connect the S-VIDEO OUT jack on the DVD Receiver to the S-Video in jack on the TV using an optional S-Video cable (**S**).
- 2 Connect the Left and Right AUDIO OUT jacks of the DVD Receiver to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

#### Component Video (Color Stream®) connection

- 1 Connect the COMPONENT VIDEO OUT/PROGRESSIVE SCAN jacks on the DVD Receiver to the corresponding in jacks on the TV using an optional Y Pb Pr cable (**C**).
- 2 Connect the Left and Right AUDIO OUT jacks of the DVD Receiver to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

#### Progressive Scan (ColorStream® pro) connection

- If your television is a high-definition or “digital ready” television, you may take advantage of the DVD Player’s progressive scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the DVD Player.

- 1 Connect the COMPONENT VIDEO OUT/PROGRESSIVE SCAN jacks on the DVD Player to the corresponding in jacks on the TV using an optional Y Pb Pr cable (**C**).
- 2 Connect the Left and Right AUDIO OUT jacks of the DVD Player to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.


#### Notes

- Set the Progressive to “On” on the setup menu for progressive signal, see page 17.
- Progressive scan does not work with the analog video connections (yellow VIDEO OUT jack).

## Connections (Cont'd)

### Optional Equipment Connections

- Connect a TV (Monitor) to the MONITOR OUT or S-VIDEO OUT connector.
- Connect a VCR to the VIDEO 1 jacks.
- Connect an additional VCR to the VIDEO 2 jacks.
- Connect the optical output of DVD Receiver (or Digital Device etc) to the OPTICAL IN connector.

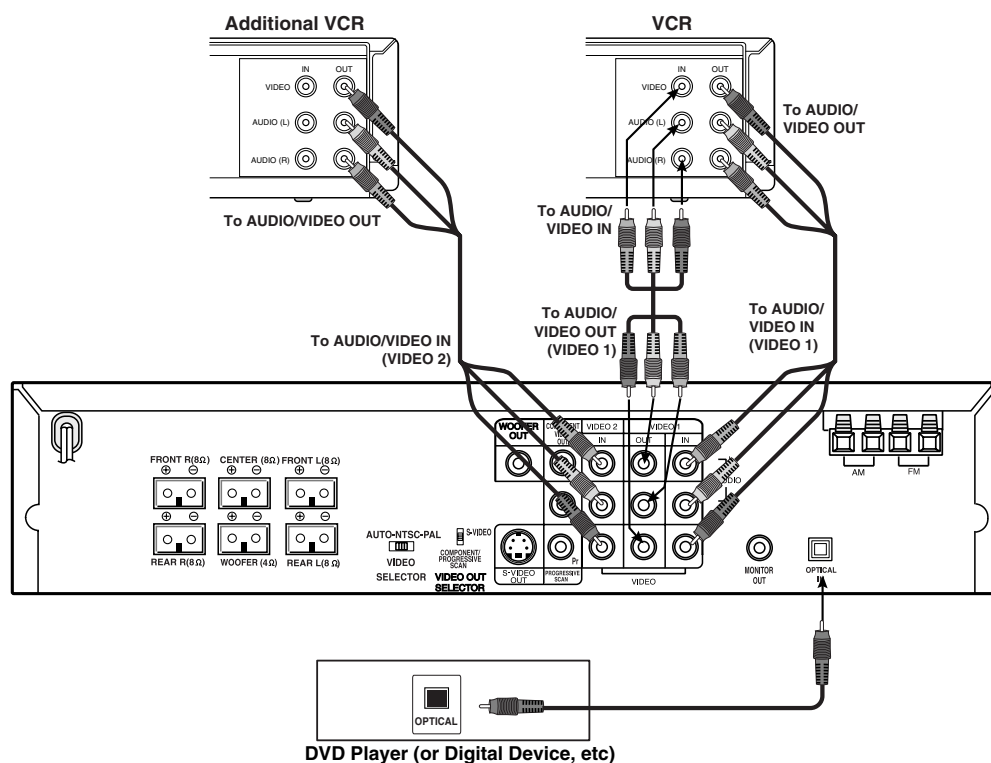


#### Notes

- When you select the VIDEO 1 function mode on remote, no video signal is output to the VIDEO 1 jack.
- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

### Antenna Connections

Connect the supplied FM/AM antennas for listening to the radio.

- Connect the AM loop antenna to the AM antenna connector.
- Connect the FM wire antenna to the FM 300Ω antenna connector.

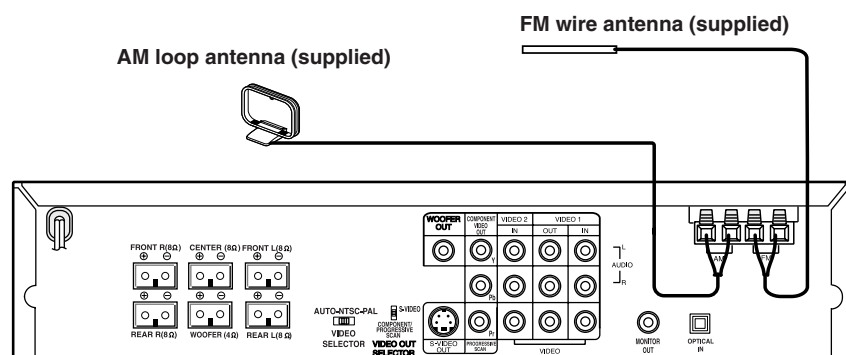

#### Notes

- To prevent noise pickup, keep the AM loop antenna away from the DVD Receiver and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.


## Connections (Cont'd)

### Speaker System Connections

Connect the speakers using the supplied speaker cords by matching the colors of the terminals and those of the cords. To obtain the best possible surround sound, adjust the speaker parameters (distance, level, etc.).

#### Notes

- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and – to –. If the cords are reversed, the sound will be distorted and lack bass.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive volume output to the speakers.
- Do not disassemble the front covers of supplied speakers.

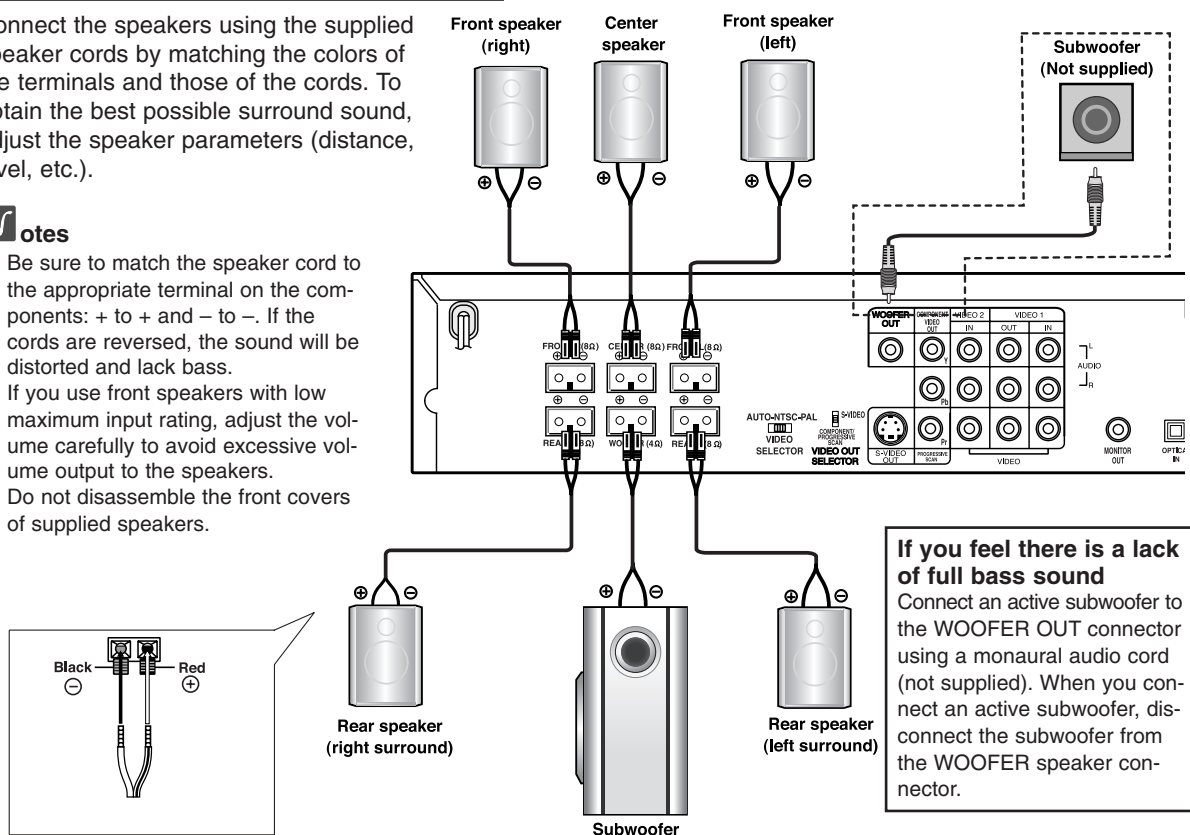

### Speaker Positioning

In the case of normal position use the 6 speakers (2 front speakers, center speaker, 2 rear speakers and subwoofer). If you want to hear deeper bass sound, DTS digital surround or Dolby Digital surround, you should connect an optional active subwoofer (has its own built-in amplifier).

#### • Front speakers

According to your listening position set up the speakers for equal distance. And by hearing position set up the interval between speakers at 45 degree.

#### • Center speaker

It is ideal that the center speakers and front speakers are same height. But normally place it above or below the television as shown below.


#### • Rear speakers

Place left and right behind the listening area. These speakers recreate sound motion and atmosphere required for surround playback. For best results, do not install the rear speakers too far behind the listening position, install them at or above the level of the listener's ears. It is also effective to direct the rear speakers towards a wall or ceiling to further disperse the sound.

In the case of a smaller room size, if the audience is near to the rear wall set the rear speakers opposite each other, and set the rear speakers 60 - 90 cm above the listener's ears.

#### • Subwoofer

This can be placed in any front position.

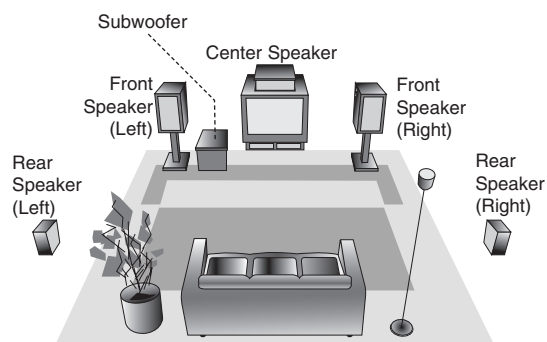

**Speaker Positioning Example**

## Before Operation

### Mini Glossary for Sound Mode

#### **dtS**

Allows you to enjoy 5.1(or 6) discrete channels of high quality digital audio from DTS program sources bearing the trademark such as discs, DVD and compact discs, etc. DTS Digital Surround delivers up to 6 channels of transparent audio(which means identical to the original masters) and results in exceptional clarity throughout a true 360 degree sound field. The term DTS is a trademark of DTS Technology, LLC. Manufactured under license from DTS Technology, LLC.

#### **DOLBY DIGITAL**

The Dolby Digital surround format lets you enjoy up to 5.1 channels of digital surround sound from a Dolby Digital program source. If you play DVDs with "DOLBY DIGITAL" mark, you can enjoy even better sound quality, greater spatial accuracy, and improved dynamic range.

#### **HALL 1**

When playing recordings of live or classical music, this mode provides a feeling similar to actually being in a small concert hall.

#### **HALL 2**

When playing recordings of live or classical music, this mode provides a feeling similar to actually being in a large concert hall.

#### **THEATER**

This mode provides a three dimensional effect similar to that of a movie theater.

#### **DOLBY PRO LOGIC (II)**

Dolby Pro Logic II creates five full-bandwidth output channels from two-channel sources. This is done using an advanced, high-purity matrix surround decoder that extracts the spatial properties of the original recording without adding any new sounds or tonal colorations.

##### **EMULATION mode:**

The Pro Logic Emulation mode offers users the same robust surround processing as original Pro Logic, in case the source content is not of optimum quality, or if there is a desire to hear the program more "as it used to be." When this mode is used, it is called Pro Logic, as before. There is no "Pro Logic I" mode. The Pro Logic emulation mode is optional. Dolby does not require PLII products to use the original Pro Logic decoding algorithm. However, if the DSP contains the original Pro Logic code, and if the product maker would like to use it, this is quite acceptable and even encouraged. A product must not offer both original Pro Logic and the Pro Logic emulation mode.

##### **MOVIE mode:**

The Movie mode is for use with stereo television shows and all programs encoded in Dolby Surround. The result is enhanced soundfield directionality that approaches the quality of discrete 5.1-channel sound.

##### **MUSIC mode:**

The Music mode is for use with any stereo music recordings, and provides a wide and deep sound space. The Music mode includes controls that allow the sound to be tailored to individual listening tastes.

##### **VIRTUAL mode:**

The Virtual mode is usually used when Pro Logic II is connected to a virtual process for speaker use. However, there might be some virtualizers for which this mode does not produce the intended result. For those virtualizers, Movie mode may give the best surround effect. Virtual mode is designed to be used with the virtual process developed by Dolby Laboratories. The Pro Logic II mode should be called only "Pro Logic II" so the Virtual name can be reserved to describe the speaker virtualization process itself.

##### **MATRIX mode:**

The Matrix mode is the same as the Music mode except that the directional enhancement logic is turned off. It may be used to enhance mono signals by making them seem "larger." The Matrix mode may also find use in auto systems, where the fluctuations from poor FM stereo reception can otherwise cause disturbing surround signals from a logic decoder. The ultimate "cure" for poor FM stereo reception may be simply to force the audio to mono.

### **SURROUND OFF (2CH STEREO)**

Outputs the sound from the front left and right speakers and subwoofer. Standard two channel (stereo) sources completely bypass the sound field processing. This allows you to play any source using only the front left and right speakers and subwoofer. **You can select SURROUND OFF by pressing BY-PASS on the remote control.**

## Before Operation (Cont'd)

### Sound Mode (Except AM)

You can enjoy surround sound simply by selecting one of the pre-programmed sound fields according to the program you want to listen to.

#### When PCM indicator is only displayed in the display window:

Each time you press the **SOUND MODE** button, sound modes are selected in the following order;

PRO LOGIC → HALL1 → HALL2 → THEATER



Each time you press **◻◻PLII** button, the Pro Logic II sound mode is changed in the following order;

PRO LOGIC → EMULATION → MOVIE → MUSIC → VIRTUAL → MATRIX



You can select SURROUND OFF (2CH STEREO) mode by pressing BY-PASS button.

 
#### When DVD is inserted.

You can change the DVD sound mode of DVD (Dolby Digital, DTS, PRO LOGIC, etc) by pressing the **AUDIO** button on the remote during playback.

Although the DVD contents differ from disc to disc, the following explains the basic operation when this feature is used.

Each time you press the **AUDIO** button, the DVD sound modes are changed in the following order;

◻◻DIGITAL → **dts** → ◻◻DIGITAL and ◻◻PRO LOGIC

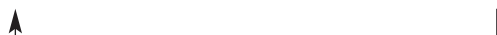

#### When DVD is inserted and PRO LOGIC indicator lights.



Each time you press the **◻◻PLII** button, Pro Logic sound modes are selected in the following order;

EMULATION → MOVIE → MUSIC → VIRTUAL → MATRIX



You can set PRO LOGIC mode to Off (2CH STEREO) by pressing BY-PASS button, the PRO LOGIC indicator disappears.

#### For your reference

- The DVD Receiver memorizes the last mode settings for each source individually.
- You can identify the encoding format of program software by looking at its packaging.
  - Dolby Digital discs are labeled with the  logo.
  - Dolby Surround encoded programs are labeled with the  logo.
  - DTS Digital Surround discs are marked with DTS.



When you play sound tracks with 96kHz sampling frequency, the output signals will be converted to 48kHz (sampling frequency).

### Sound Level

You can set the sound level of the desired channel.

#### 1 Press LEVEL.

The level indicator will appear in the display window.

#### 2 Use ◀/▶ to select a desired speaker to set.

Each time you press the ◀/▶ button, speakers are selected in the following order;

FL (Front Left) → C (Center) → FR (Front Right) →

SR (Surround Right) → SL (Surround Left) →

SW (Subwoofer) → FL (Front Left)

- In the 2 channel stereo mode, you can only select the SW (Subwoofer).

#### 3 Use ▲/▼ to adjust the sound level of the selected channel. (-6dB ~ +6dB)

#### 4 Repeat step 2-3 and adjust the sound level of the other channels.

#### 5 If level settings are complete, press LEVEL.

### Test Tone

This function allows you can easily adjust the sound balance of the speakers from the listener's position.

#### 1 Select the test tone mode by pressing TEST TONE.

- A hiss noise comes out for 2 seconds from each speakers in the following order;

FL (Front Left) → C (Center) → FR (Front Right) →

SR (Surround Right) → SL (Surround Left) →

SW (Subwoofer) → FL (Front Left)

#### 2 You can adjust the sound level during operating the test tone, first press LEVEL then press ▲/▼ buttons, so that all speaker's sound level is same from the listener's position.

- During operating the test tone, if you adjust the sound level, it will be paused in the current speaker channel.

#### 3 If setting is complete, press TEST TONE.



## Before Operation (Cont'd)

### Speaker Sound Delay Time Setting

In Dolby Digital or Dolby Pro Logic mode it is assumed that the distance from the listener to each of the speakers is equal. If not, then set the delay times of the center or rear speakers so that the sound will be heard simultaneously by the listener.

The interval from the speakers to the listener. If the distance from the listener to each speaker is the same, in the Dolby Digital and Dolby Pro Logic mode, the delay time of each speakers is as follows.

#### In Dolby Digital mode

Center delay time : 0 ms

Rear delay time: 5 ms

#### In Dolby Pro Logic mode


Center delay time : cannot set

Rear delay time : 15-30 ms

If the rear delay time is set in Dolby Digital mode, in the Dolby Pro Logic mode, the delay time is set automatically.

The delay time is 1 ms per 30 cm.

If the center and rear speakers are further than the front speakers from the listener, the delay time will be at minimum.

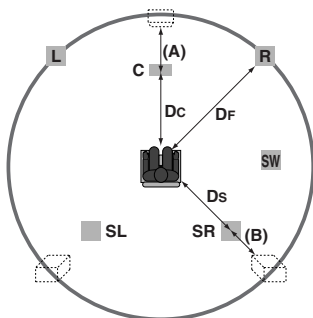

### Surround delay time setting

If the distance of Ds is equal to or longer than the Df in the left figure, set the Surround Delay Time as 0 ms. Otherwise, change the setting according to the table below.

Ex) If the distance from front speakers to the listener is 3 m and from rear speakers from the listener is 1.5 m, in the Dolby Digital mode, the rear delay time is 5 ms.

$3 \text{ m (Df)} - 1.5 \text{ m (Ds)} = 1.5 \text{ m (B)}$

$1.5 \text{ m (B)} = 150 \text{ cm} / 30 \text{ cm} = 5 \text{ ms}$

In Dolby Pro Logic II (Surround delay time):

- Emulation: 10 ~ 25 ms
- Movie: 10 ~ 25 ms
- Music: 0 ~ 15 ms
- Virtual: cannot set
- Matrix: 0 ~ 15 ms

### Center delay time setting (Dolby Digital mode only)

If the distance of Df is equal to the distance of Dc in the figure shown above, set the Center Delay Time as 0 ms. Otherwise, change the setting according to the following table.

Ex) If the distance from the front speakers to the listener is 3 m and from the center speaker to the listener is 2.4 m, the center delay time is 2 ms.

$3 \text{ m (Df)} - 2.4 \text{ m (Dc)} = 60 \text{ cm (A)}$

$60 \text{ cm (A)} / 30 \text{ cm} = 2 \text{ ms}$

### Setting the Delay Time in Dolby Digital and Dolby Pro Logic (II) mode

#### 1 Press DELAY.

The current surround delay time appears in the display window.

You can select center delay time by pressing ◀/▶ in the Dolby Digital mode only.

#### 2 Press ▲/▼ to change the delay time.

#### 3 If setting is complete, press DELAY.

#### Note

You can adjust the center delay time only in the Dolby Digital mode and its delay time appears.

### Center Width (MUSIC mode of Dolby Pro Logic II only)

This control allows center-channel sounds to be positioned between the center speaker and the left/right speakers over a range of eight steps. Step "3" uses a combination of all three front speakers to give the best vocal imaging and most seamless soundstage presentation, and is recommended for most recordings. Step "0" places all center sound in the center speaker. Step "7" places all center sound equally in the left/right speakers, just as in conventional stereo.

### DIMENSE (MUSIC mode of Dolby Pro Logic II only)

This control allows the user to gradually adjust the soundfield either towards the front or the rear. This can be useful to help achieve the desired balance from all the speakers with certain recordings that may contain either too much or too little spatial effect. Step "0" is the recommended setting, which has no effect on the sound. Steps 1, 2, and 3 gradually move the sound forward, and steps -1, -2, and -3 move the sound towards the surrounds.

### PANORAMA (MUSIC mode of Dolby Pro Logic II only)

This control extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side-wall imaging. It is particularly effective for recordings which have strong left- or right-channel elements in the mix, as these are detected and accentuated by the Panorama process.




## Before Operation (Cont'd)

### **Caution:**

Before using the remote control, press the **DVD** or **TV** button to select the device to be operated.

## General Explanation

This manual gives the basic instructions for operating the DVD Receiver. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD Receiver or is not available on the disc.

## On-Screen Display

The general playback status can be displayed on the TV screen. Some items can be changed on the menu.




 


### On-screen display operation

**1** Press **DISPLAY** during playback.

**2** Press **▲** or **▼** to select an item.  
The selected item will be highlighted.

**3** Press **◀** or **▶** to change the setting of an item.  
The number buttons can also be used for setting numbers (e.g., title number). For some functions, press **ENTER** to execute the setting.







### Temporary Feedback Field Icons

	Repeat Title
	Repeat Chapter
	Repeat A-B
	Repeat Off
	Resume playback from this point
	Action prohibited or not available

### **Notes**

- Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the on-screen display disappears.

### DVD

Items		Function (Use <b>▲</b> / <b>▼</b> to select desired item)	Selection Method
Title Number	 1/3	Shows the current title number and total number of titles, and skip to the desired title number.	<b>◀</b> / <b>▶</b> , or Numeric, <b>ENTER</b>
Chapter Number	 1/12	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	<b>◀</b> / <b>▶</b> , or Numeric, <b>ENTER</b> , <b>SKIP</b>
Time search	 0:16:57	Shows the elapsed playing time, and search the point by the elapsed time directly.	Numeric, <b>ENTER</b>
Audio language and Digital Audio Output mode	 1 ENG DII 6 CH	Shows the current audio soundtrack language, encoding method and channel number, and changes the setting.	<b>◀</b> / <b>▶</b> <b>AUDIO</b>
Subtitle language	 OFF	Shows the current subtitles language, and changes the setting.	<b>◀</b> / <b>▶</b> <b>S-TITLE</b>
Angle	 1/1	Shows the current angle number and total number of angles, and changes the angle number.	<b>◀</b> / <b>▶</b> <b>ANGLE</b>

## Before Operation (Cont'd)

### Initial Settings

You can set your own Personal Preferences on the player.

### Initial Settings General Operation

- 1 Press SETUP.**  
The setup menu appears.



- 2 Use ▲/▼ to select the desired option.**  
The screen will show the current setting for the selected item, as well as alternate setting(s).
- 3 While the desired item is selected, press ►, then ▲/▼ to select the desired setting.**
- 4 Press ENTER to confirm your selection.**  
Some menu options require additional steps.
- 5 Press SETUP, RETURN or PLAY to exit the setup menu.**

### Language

#### Disc Language **DVD**

Select a language for the disc's Menu, Audio and Subtitle.

**Original** : The original language set for the disc is selected.

**Other** : To select another language, use number buttons to enter the corresponding 4-digit number according to the language code list on page 29. If you enter the wrong language code, press CLEAR.



#### Menu Language

Select a language for the setup menu. This is the menu you see when you press SETUP.




### Picture

#### TV Aspect **DVD**

**4:3 Letterbox**: Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.

**4:3 Panscan**: Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either sides of the picture are cut off.

**16:9 Wide**: Select when a 16:9 wide TV is connected.

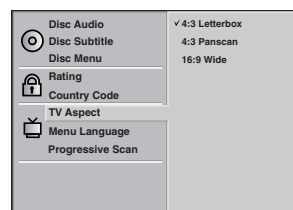


#### Progressive Scan **DVD**

Progressive Scan Video provides the highest quality pictures with less flickering.

If you are using the COMPONENT VIDEO OUT/ PROGRESSIVE SCAN jacks, but are connecting the DVD Player to a standard (analog) television, set Progressive Scan to Off.

If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to On.

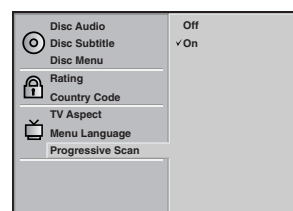

#### Notes

- Progressive Scan only works when the VIDEO OUTPUT switch on the rear panel is set to COMPONENT/PROGRESSIVE SCAN.

#### Caution


Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to On in error, you must reset the unit. Press STOP to stop any disc that is playing. Next, press STOP again and hold it for five seconds before releasing it. The video output will be restored to the standard setting, and a picture will once again be visible on a conventional analog TV or monitor.

## Before Operation (Cont'd)

### Parental Control

#### Rating **DVD**

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

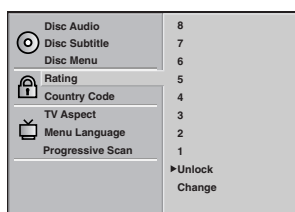

**1** Select "Rating" on the Setup menu using the ▲ and ▼ buttons.

**2** While "Rating" is selected, press ►.

**3** When you have not entered a password yet; Enter a 4-digit password using the numerical buttons to create a personal 4-digit security password, then press ENTER. And enter the 4-digit password again and press ENTER to verify.

**When you have already entered a password;** Enter a 4-digit password using the numerical buttons to confirm the personal 4-digit security password, then press ENTER.

If you make a mistake before pressing ENTER, press CLEAR and enter 4-digit security password again.

**4** Select a rating from 1 to 8 using the ▲/▼ buttons. One (1) has the least playback restrictions. Eight (8) has the most playback restrictions.


**Unlock:** If you select Unlock, Parental Control is not active. The disc will play in full.

**Ratings 1 to 8:** Some discs contain scenes not suitable for children. If you set a rating for the player, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

**5** Press ENTER to confirm your rating selection, then press SETUP to exit the menu.

#### Country Code **DVD**

Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Country Code List", page 30.).

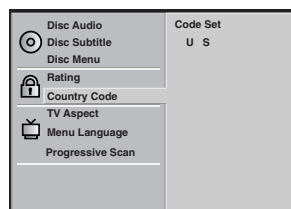

**1** Select Country Code using the ▲ / ▼ buttons on the setup menu.

**2** While Country Code is selected, press ►.

**3** Follow step 3 of "Rating" on left.

**4** Select the first character using the ▲/▼ buttons.

**5** Shift the cursor using ◀/▶ buttons and select the second character using ▲/▼ buttons.

**6** Press ENTER to confirm your country code selection, then press SETUP to exit the menu.

#### Note

Confirmation of the 4-digit password is necessary when the code is changed (see "Changing the 4-digit code" below).

#### Changing the 4-digit code

- 1 Follow steps 1-2 as shown above to the left (Rating).
- 2 Enter the old code, then press ENTER.
- 3 Select Change using the ▲/▼ buttons then press ENTER.
- 4 Enter the new 4-digit code, then press ENTER.
- 5 Enter exactly the same code a second time and verify by pressing ENTER.
- 6 Press SETUP to exit the menu.

#### If you forget your 4-digit code

If you forget your password, to clear the current password, follow the procedure below.

- 1 Press SETUP to display the setup menu.
- 2 Use the Number buttons to enter the 6-digit number "210499."  
The 4-digit password is cleared.
- 3 Enter a new code as shown above to the left (Rating).

## Operation with Radio

### Presetting Radio Stations

You can preset 30 stations for FM and AM. Before tuning, make sure that you have turned down the volume to the minimum.

**1** Press **FUNCTION** on the front panel repeatedly or **FM/AM** on the remote control until **FM** or **AM** appear in the display window.

**2** And then every time you press **FM/AM**, **FM** and **AM** change alternately.

**3** Press and hold **TUNING/SKIP** **◀◀** **◀◀** or **▶▶** **▶▶** on the front panel for about two seconds until the frequency indication starts to change, then release.

Scanning stops when the DVD Receiver tunes in a station. "TUNED" and "STEREO" (for stereo program) appear in the display window.

#### **N**ote

"Tuned" only appears when the signal is FM and stereo.

**4** Press **MEMORY**.  
A preset number will flash in the display window.

**5** Press **TUNING/SKIP** or **◀◀** **◀◀** or **▶▶** **▶▶** on the front panel to select the preset number.

**6** Press **MEMORY** again.  
The station is stored.

**7** Repeat steps 3 to 6 to store other stations.

#### To tune in a station with a weak signal

Press **TUNING/SKIP** or **◀◀** **◀◀** or **▶▶** **▶▶** repeatedly in step 3 to tune in the station manually.

#### To clear all the memorized stations

Press and hold **MEMORY** for about three seconds and "CLEAR ALL" appears in the display window and then press **MEMORY** again, the stations are cleared.

#### **N**ote

 
If all stations have already been entered, **FULL** message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 5-6 as above.

### Listening to the Radio

Preset radio stations in the DVD receiver's memory first (see "Presetting radio stations" on the left side).

**1** Press **FM/AM** until **AM** or **FM** appears in the display window.

The last received station is tuned in.

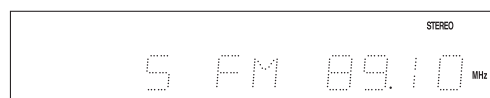

**2** Press **PRESET** **◀◀/▶▶** repeatedly to select a preset station.

Each time you press the button, the DVD receiver tunes in one preset station at a time.

**3** Adjust the volume by rotating **VOLUME** on the front panel or by pressing **VOLUME +** or **-** on the remote control repeatedly.

#### To turn off the radio

Press **POWER** to turn the DVD receiver off or select another function mode (**DVD/CD**, **VIDEO 1** or **VIDEO 2**).

#### To listen to non-preset radio stations

- Use manual or automatic tuning in step 2.
- For manual tuning, press **TUNING/SKIP** **◀◀** **◀◀** or **▶▶** **▶▶** on the front panel repeatedly.
- For automatic tuning, press and hold **TUNING/SKIP** **◀◀** **◀◀** or **▶▶** **▶▶** for about two seconds on the front panel.

#### For your reference

##### • If an FM program is noisy

Press **MONO/ST.** on the front panel so that "STEREO" disappears in the display window. There will be no stereo effect, but the reception will improve. Press the button again to restore the stereo effect.

##### • To improve reception

Realign the antenna.

## Operation with Radio (Cont'd)

### Sleep Timer Setting

You can set the DVD receiver to turn off automatically at a specified time.

**1 Press SLEEP to set the desired sleep time.**

The SLEEP indicator and sleep time appears in the display window.

**2 Each time you press SLEEP the setting changes in the following order.**

SLEEP 120 → 90 → 60 → 50 → 40 → 30 → 20 → 10 → OFF



**Note**

- **You can check the time remaining before the DVD receiver turns off.**

Press SLEEP. The remaining time appears in the display window.

### Dimmer

This function will appear in the display window and volume LED in power-on status.

**Press the DIMMER repeatedly.**

### Mute

**Press MUTE to turn off the sound, press again to restore.**

For example, you can mute your unit to answer the telephone, "MUTE" indicator flashes in the display window.

### Using Headphone Jack

Connect a stereo headphone plug (ø3.5mm) into the **PHONES connector**.

The speakers are automatically disconnected when you plug in headphones (not supplied).

### Selecting Input Source

You can use VCRs or other units connected to the VIDEO1, VIDEO2 connectors or Optical connector.

Refer to the owner's manual supplied with the unit for further information on the operation.

**Press VIDEO1 or VIDEO2 repeatedly on the remote control to select the desired input source.**

Each time you press this button, the mode of the function changes in the following sequence:

- **VIDEO1 ANA:** for selecting the analog signal from VIDEO1 AUDIO IN (L/R) & VIDEO IN Connectors.
- **VIDEO1 DIG:** for selecting the digital signal from OPTICAL IN Connector.
- **VIDEO2 ANA:** for selecting the analog signal from VIDEO2 AUDIO IN (L/R) & VIDEO IN Connectors.
- **VIDEO2 DIG:** for selecting the digital signal from OPTICAL IN Connector.

**Note**

- The Optical input function is available only when the other unit's Sampling Frequency is 32 ~ 48kHz.

## Operation with DVD

### Playing a DVD

#### Getting to play **DVD**

- Switch on the TV and select the AV input source connected to the DVD receiver.
- When you want to enjoy the sound of discs or from the audio system, turn on the audio system and select the input source connected to the DVD receiver.

#### **1** Press OPEN/CLOSE to open the disc tray.

#### **2** Load your chosen disc in the tray, with the label facing up.

When a double-sided DVD is inserted, make sure the side you want to play is facing up.

#### **3** Press OPEN/CLOSE to close the tray. READING appears on the TV screen, and playback starts automatically. If playback does not start, press PLAY. In some cases, the disc menu might appear instead.

#### When the menu screen is displayed

The menu screen may be displayed first after loading a DVD which contains a menu.

#### **DVD**

Use the ◀ ▶ ▲ ▼ buttons to select the title/chapter you want to view, then press ENTER to start playback. Press TITLE or MENU to return to the menu screen.

#### Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see “Parental Control”, on page 18).
- DVDs may have a region code.
- Your player will not play discs that have a region code different from your player. The region code for this player is 1 (one).

### General Features

#### Note

Unless stated, all operations described are based on remote control use. Some operations can be carried out using the setup menu.

#### Moving to another TITLE **DVD**



When a disc has more than one title, you can move to another title as follows:

- Press DISPLAY when playback is stopped, then press the appropriate numerical button (0-9) to select a title number.

#### Moving to another CHAPTER/TRACK



When a title on a disc has more than one chapter or a disc has more than one track, you can move to another chapter/track as follows:

- Press SKIP ◀◀ or ▶▶ briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press ◀◀ twice briefly to step back to the previous chapter/track.
- To go directly to any chapter during DVD playback, press DISPLAY. Then, press ▲/▼ to select C (chapter). Then, enter the chapter/track number using the numerical buttons (0-9).

#### Note

For two-digit numbers, press the buttons in rapid succession.

#### Slow Motion **DVD**

- 1 Press SLOW SCAN + or - during playback. The player will enter SLOW mode.
- 2 Use the SLOW SCAN + or - to select the required speed: ◀◀ 1/16, ◀◀ 1/8, ◀◀ 1/4 or ◀◀ 1/2 (backward), or ▶▶ 1/16, ▶▶ 1/8, ▶▶ 1/4 or ▶▶ 1/2 (forward).
- 3 To exit slow motion mode, press PLAY.

## Operation with DVD

### General Features (cont'd)

#### Still Picture and Frame-by-Frame Playback

##### DVD

- 1 Press PAUSE during playback.  
The player will now go into PAUSE mode.
- 2 You can advance the picture frame by frame by pressing PAUSE repeatedly on the remote control.

#### Search

##### DVD

- 1 Press and hold SKIP or for about two seconds during playback.  
The player will now go into SEARCH mode.
- 2 Press and hold SKIP or repeatedly to select the required speed: X2, X4, X16, X100 (backward) or X2, X4, X16, X100 (forward).
- 3 To exit SEARCH mode, press PLAY.

#### Repeat

##### DVD



##### DVD Video Discs - Repeat Chapter/Title/Off

- 1 To repeat the currently playing chapter, press REPEAT.  
The Repeat Chapter icon appears on the TV screen.
- 2 To repeat the title currently playing, press REPEAT a second time.  
The Repeat Title icon appears on the TV screen.
- 3 To exit Repeat mode, press REPEAT a third time.  
The Repeat Off icon appears on the TV screen.

#### Repeat A-B

##### DVD



To repeat a sequence in a title:

- 1 Press REPEAT A-B at your chosen starting point.  
A- appears briefly on the TV screen.
- 2 Press REPEAT A-B again at your chosen end point.  
A-B appears briefly on the TV screen, and the repeat sequence begins (a-b repeat appears on the player's display).
- 3 To cancel the sequence, press REPEAT A-B.

#### Time Search

##### DVD



The Time Search function allows you to start playing at any chosen time on the disc.

- 1 Press DISPLAY during playback. The on-screen display appears on the screen.  
The Time Search box shows the elapsed playing time of the current disc.
- 2 Within 10 seconds, press / to select the Time Search icon in the on-screen display.  
The “-:--:--” appears in the Time Search box.
- 3 Within 10 seconds, use the numerical buttons to enter the required start time. Enter hours, minutes and seconds from left to right in the box.  
If you enter the wrong numbers, press CLEAR to remove the numbers you entered. Then enter the correct numbers.
- 4 Within 10 seconds, press ENTER to confirm the start time.  
Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.



## Operation with DVD

### General Features (cont'd)

#### Zoom **DVD**

The Zoom function allows you to enlarge the video image and to move through the enlarged image.

- 1 Press ZOOM during playback or still playback to activate the Zoom function.  
If you press ZOOM repeatedly, the magnification level increases up to six times.
- 2 Use the ◀ ▶ ▲ ▼ buttons to move through the zoomed picture.
- 3 Press CLEAR to resume normal playback or return to the paused image.

#### **N**otes

- The zoom function may not work for some DVDs.
- The zoom function may not work on multi-angle scenes.

#### Marker Search **DVD**



You can start playback from a memorized point. Up to nine points can be memorized.

To enter a mark, follow these steps.

- 1 During disc playback, press MARKER when playback reaches the spot that you want to memorize.  
The Marker icon will appear on the TV screen briefly.
- 2 Repeat step 1 to enter up to nine Marker points on a disc.

#### To Recall a Marked Scene

- 1 During disc playback, press SEARCH.  
The MARKER SEARCH menu will appear on the screen.
- 2 Within 10 seconds, press ◀/▶ to select a Marker number that you want to recall.
- 3 Press ENTER.  
Playback will start from the Marked scene.
- 4 To remove the MARKER SEARCH menu, press SEARCH.

#### To clear a Marked Scene

- 1 During disc playback, press SEARCH.  
The MARKER SEARCH menu will appear on the screen.
- 2 Use ◀/▶ to select the Marker number that you want to erase.
- 3 Press CLEAR.  
The Marker number will be erased from the list.
- 4 Repeat steps 2 and 3 to erase additional Marker numbers.
- 5 To remove the MARKER SEARCH menu, press SEARCH.

### Special DVD Features **DVD**

#### Checking the contents of DVD Video discs: Menus

DVDs may contain menus that allow you to access special features. To use the disc menu, press MENU. Then, use the appropriate numerical button to select an option. Or, use the ◀ ▶ ▲ ▼ buttons to highlight your selection, then press ENTER.

#### Title Menu **DVD**

- 1 Press TITLE.  
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press TITLE again.

#### Disc Menu **DVD**

- 1 Press MENU.  
The disc menu is displayed.
- 2 To remove the disc menu, press MENU again.

#### Camera Angle **DVD**

If the disc contains sequences recorded from different camera angles, the angle icon blinks on the display. You can then change the camera angle if you wish.

- Press ANGLE repeatedly during playback to select a desired angle.  
The number of the current angle appears on the display.

#### Changing the Audio Language **DVD**



Press AUDIO repeatedly during playback to hear a different audio language or audio track.

#### Subtitles **DVD**

Press S-TITLE repeatedly during playback to see the different subtitle languages.

#### **N**ote

If appears, the feature is not available on the disc.


## Operation with Audio CD and MP3 Disc

### Playing an Audio CD and MP3 disc

The DVD Receiver can play MP3 format recordings on CD-ROM, CD-R or CD-RW discs.

Before playing MP3 recordings, read the notes of MP3 Recordings on page 26.

- 1 Insert a disc and close the tray.**  
The menu appears on the TV screen.

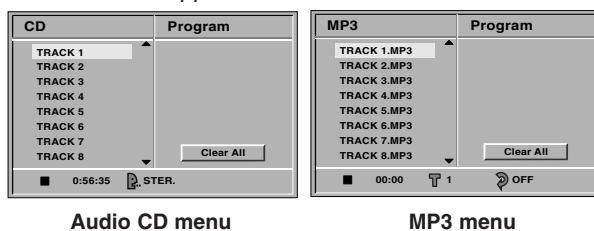

- 2 Use ▲/▼ to select a track then press PLAY.**  
Playback starts.  
During playback, the current track's elapsed playing time will appear on the display.  
Playback will stop at the end of the disc.

- 3 To stop playback at any other time, press STOP.**

### Pause **CD** **MP3**

- Press PAUSE during playback.
- To return to playback, press PLAY or press PAUSE again.

### Moving to another Track **CD** **MP3**

- Press SKIP **⏮** or **⏭** briefly during playback to go to the next track or to return to the beginning of the current track.
- Press SKIP **⏮** twice briefly to step back to the previous track.
- In case of audio CD, to go directly to any track, enter the track number using the numerical buttons (0-9) during playback.

### Repeat TRACK/ALL/OFF **CD** **MP3**

- To repeat the track currently playing, press REPEAT.  
The Repeat Track icon appears on the menu screen.
- To repeat all tracks of disc in the unit, press REPEAT a second time.  
The Repeat All icon appears on the menu screen.
- To exit Repeat mode, press REPEAT a third time.  
The Repeat Off icon appears on the menu screen.

### Search **CD**

- Press and hold SKIP **⏮** or **⏭** for about two seconds during playback.  
The player will now go into SEARCH mode.
- Press and hold SKIP **⏮** or **⏭** repeatedly to select the required speed: **⏮**X2, **⏮**X4, **⏮**X8 (backward) or **⏭**X2, **⏭**X4, **⏭**X8 (forward).
- Search speed and direction are indicated on the menu screen.
- To exit SEARCH mode, press PLAY.

### Note

- The sound is muted during SEARCH mode.

### Repeat A-B **CD**

To repeat a sequence.

- During disc playback, press REPEAT A-B at your chosen starting point.  
The Repeat icon and "A -" appears on the menu screen.
- Press REPEAT A-B again at your chosen end point.  
The Repeat icon and "A B" appears on the menu screen, and the sequence begins to play repeatedly.
- To exit the sequence and return to normal play, press REPEAT A-B again.  
The Repeat icon and "OFF" appears on the menu screen.

### Changing the Audio Channel **CD**

Press AUDIO repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).

## Programmed Playback CD MP3


### Programmed Playback with Audio CD and MP3 Disc

Program allows you to store your favorite tracks for a particular disc in the player memory.


Program can contain 32 tracks (Audio CD) or 60 tracks (MP3 disc).

**1 Insert the disc and close the tray.**  
The menu is displayed on the TV screen.

**2 Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.**


The  mark will appear to the right of the word Program on the right side of the menu screen.

#### Note

Press PROGRAM to exit the Program Edit mode; the  mark will disappear.

**3 Use ▲/▼ to select a track then press ENTER to place the selected track on the Program list.**

**4 Repeat step 3 to place additional tracks on the Program list.**

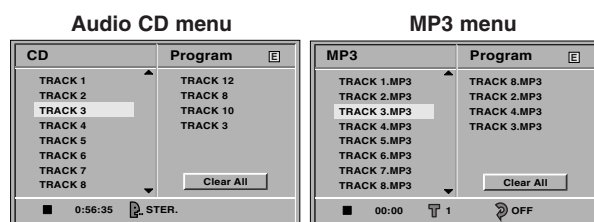

**5 Press ►.**

The programmed track you selected last is highlighted on the program list.

**6 Use ▲/▼ to select the track you want to start playing.**

Press TITLE to move to the next page.

Press MENU to move to the previous page.

**7 Press PLAY to start.**

Playback begins in the order in which you programmed the tracks and "PROGRAM" appears on the menu screen. Playback stops after all of the tracks on the Program list have played once.

### Repeat Programmed Tracks

- To repeat the track currently playing, press REPEAT. The Repeat Track icon appears on the menu screen.
- To repeat all tracks of program list, press REPEAT a second time. The Repeat All icon appears on the menu screen.
- To exit Repeat mode, press REPEAT a third time. The Repeat Off icon appears on the menu screen.

### Erasing a Track from Program List

**1 Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.**

The  mark will appear.

**2 Press ► to move to the Program list.**

**3 Use ▲/▼ to select the track that you wish to erase from the Program list.**

**4 Press CLEAR.**

The track will be erased from the Program list.

### Erasing the Complete Program List

**1 Follow steps 1-2 of "Erasing a Track from Program List" as above.**

**2 Use ▲/▼ to select "Clear All", then press ENTER.**

The complete Program for the disc will be erased.

The programs are also cleared when the disc is removed.

### To resume normal playback from programmed playback

Press and hold PROGRAM for 3 seconds until "PROGRAM" indicator disappears in the display window.

## Additional Information

### Last Condition Memory

**DVD** **CD**

This player memorizes the last condition for the last disc you have watched. Settings remain in memory even if you remove the disc from the player or switch off the player. If you load a disc that has its settings memorized, the latest stop position is automatically recalled.

#### Notes

- Settings are stored in memory for use any time.
- This player does not memorize settings of a disc if you switch off the player before playing the disc.

### Screen Saver **DVD**

The screen saver picture appears when you leave the DVD Receiver in stop mode for about five minutes.

### Video Mode Setting **DVD**

- With certain discs, the playback picture may be flickering or Dot Crawl is shown on straight lines. That means Vertical interpolation or De-interlace is not perfectly matched with the disc. In that case, the picture quality can be improved with changing video mode.
- To change the video mode, press and hold DISPLAY for 3 seconds during playback of a disc. Changed video mode number is displayed on the TV screen. Check whether video quality is improved. You can repeat above procedure until desired picture quality appears.
- Procedure of video mode is changed;  
MODE1 → MODE2 → MODE3 → MODE4 →  
MODE5 → MODE1
- If you turn the power off, the video mode will revert back to initial state (MODE1).

### Notes on MP3 Discs

#### About MP3

- An MP3 file is audio data compressed by using MPEG1, the audio layer-3 file-coding scheme. We call files that have the “.mp3” file extension “MP3 files”.
- The player can not read an MP3 file that has a file extension other than “.mp3”.
- The player can not read a fake MP3 file that has a file extension “.mp3”.

#### MP3 disc compatible with this player is limited as follows:

1. Sampling Frequency / only at 44.1kHz
2. Bit rate / within 96 - 192kbps
3. CD-R physical format should be “ISO 9660”
4. If you record MP3 files using the software which cannot create a FILE SYSTEM, for example “Direct-CD” etc., it is impossible to playback MP3 files. We therefore recommend that you use “Easy-CD Creator”, which creates an ISO9660 file system.
5. A single session disc requires MP3 files in the first track. If there is no MP3 file in the 1st track, it cannot playback MP3 files. If you wish to playback MP3 files, format all the data in the disc or use a new one.
6. We do not recommend using CD-RW discs. Please use finished CD-R discs only.
7. File names should be named using 8 letters or less and must incorporate “.mp3” extension  
e.g. “\*\*\*\*\*.MP3”.
8. Do not use special letters such as “\_?!><+\*}{^[@];:/.,” etc.
9. Total number of files on the disc should be less than 200.
10. Use 74 minute CD-R discs (650M), Do not use 80 minute CD-R (700M) software

This DVD receiver requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files).

Customers should also note that permission is required in order to download MP3 files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>
The power is on, but the DVD receiver does not work.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the DVD receiver appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>
There is no sound or only a very low-level sound is heard.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode of the audio receiver so you can listen to the sound from the DVD receiver.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio connecting cord is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The DVD receiver does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)</li> </ul>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system and Regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>A menu is on the TV screen.</li> </ul>	<ul style="list-style-type: none"> <li>Press the SET-UP button to turn off the menu screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>The plugs and jacks are dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Wipe them with a cloth slightly moistened with alcohol.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>The speakers and components are connected poorly.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the speakers and components securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The DVD receiver is located too close to the TV.</li> </ul>	<ul style="list-style-type: none"> <li>Move your TV away from the audio components.</li> </ul>

## Troubleshooting (Cont'd)

Symptom	Cause	Correction
Recording is not possible	• The components are connected incorrectly.	• Connect the components correctly.
	• The source is selected incorrectly.	• Select the source with FUNCTION button (CD/DVD, VIDEO 1, VIDEO 2 or Tuner).
Radio stations cannot be tuned in.	• The antenna is positioned or connected poorly.	• Connect the antenna securely.
		• Adjust the antennas and connect an external antenna if necessary.
	• The signal strength of the stations is too weak (when tuning in with automatic tuning).	• Tune in the station manually.
	• No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).	• Preset the stations (page 19).
The remote control does not work properly.	• The remote control is not pointed at the DVD receiver remote sensor.	• Point the remote control at the DVD receiver remote sensor.
	• The remote control is too far from the DVD receiver.	• Operate the remote control within about 23 ft (7 m).
	• There is an obstacle in the path of the remote control and the DVD receiver.	• Remove the obstacle.
	• The batteries in the remote control are exhausted.	• Replace the batteries with new ones.

## Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 17).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	Slovak
6566	Abkhazian	7082	French	7679	Laothian	8376	Slovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	Samoaan
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	Shona
6582	Arabic	7168	Scots Gaelic	7771	Malagasy	8379	Somali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	Serbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	Sudanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	Swedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	Swahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Punjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twi
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	Spanish	7578	Kannada	8279	Rumanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	Sanskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	Sindhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	Serbo-Croatian	9072	Chinese
7074	Fijian	7665	Latin	8373	Singhalese	9085	Zulu



## Country Code List

Enter the appropriate code number for the initial setting “Country Code” (See page 18).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina	GA	Gabon	MC	Monaco	SN	Senegal
AS	American Samoa	GB	Great Britain	MD	Moldavia	SO	Somalia
AT	Austria	GD	Grenada	MG	Madagascar	SR	Suriname
AU	Australia	GE	Georgia	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GF	French Guyana	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syria
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GQ	Guadeloupe (French)	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GR	Greece	MR	Mauritania	TG	Togo
BH	Bahrain	GS	S. Georgia & S. Sandwich Isls.	MS	Montserrat	TH	Thailand
BI	Burundi	GT	Guatemala	MT	Malta	TJ	Tadjikistan
BJ	Benin	GU	Guam (USA)	MU	Mauritius	TK	Tokelau
BM	Bermuda	GW	Guinea Bissau	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GY	Guyana	MW	Malawi	TN	Tunisia
BO	Bolivia	HK	Hong Kong	MX	Mexico	TO	Tonga
BR	Brazil	HM	Heard and McDonald Islands	MY	Malaysia	TP	East Timor
BS	Bahamas	HN	Honduras	MZ	Mozambique	TR	Turkey
BT	Bhutan	HR	Croatia	NA	Namibia	TT	Trinidad and Tobago
BV	Bouvet Island	HT	Haiti	NC	New Caledonia (French)	TV	Tuvalu
BW	Botswana	HU	Hungary	NE	Niger	TW	Taiwan
BY	Belarus	ID	Indonesia	NF	Norfolk Island	TZ	Tanzania
BZ	Belize	IE	Ireland	NG	Nigeria	UA	Ukraine
CA	Canada	IL	Israel	NI	Nicaragua	UG	Uganda
CC	Cocos (Keeling) Islands	IN	India	NL	Netherlands	UK	United Kingdom
CF	Central African Republic	IO	British Indian Ocean Territory	NO	Norway	UM	USA Minor Outlying Islands
CG	Congo	IQ	Iraq	NP	Nepal	US	United States
CH	Switzerland	IR	Iran	NR	Nauru	UY	Uruguay
CI	Ivory Coast	IS	Iceland	NU	Niue	UZ	Uzbekistan
CK	Cook Islands	IT	Italy	NZ	New Zealand	VA	Vatican City State
CL	Chile	JM	Jamaica	OM	Oman	VC	Saint Vincent & Grenadines
CM	Cameroon	JO	Jordan	PA	Panama	VE	Venezuela
CN	China	JP	Japan	PE	Peru	VG	Virgin Islands (British)
CO	Colombia	KE	Kenya	PF	Polynesia (French)	VI	Virgin Islands (USA)
CR	Costa Rica	KG	Kyrgyzstan	PG	Papua New Guinea	VN	Vietnam
CS	Former Czechoslovakia	KH	Cambodia	PH	Philippines	VU	Vanuatu
CU	Cuba	KI	Kiribati	PK	Pakistan	WF	Wallis and Futuna Islands
CV	Cape Verde	KM	Comoros	PL	Poland	WS	Samoa
CX	Christmas Island	KN	Saint Kitts & Nevis Anguilla	PM	Saint Pierre and Miquelon	YE	Yemen
CY	Cyprus	KP	North Korea	PN	Pitcairn Island	YT	Mayotte
CZ	Czech Republic	KR	South Korea	PR	Puerto Rico	YU	Yugoslavia
DE	Germany	KW	Kuwait	PT	Portugal	ZA	South Africa
DJ	Djibouti	KY	Cayman Islands	PW	Palau	ZM	Zambia
DK	Denmark	KZ	Kazakhstan	PY	Paraguay	ZR	Zaire
DM	Dominica	LA	Laos	QA	Qatar	ZW	Zimbabwe
DO	Dominican Republic	LB	Lebanon	RE	Reunion (French)		
DZ	Algeria			RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt			SA	Saudi Arabia		
EH	Western Sahara			SB	Solomon Islands		

## Specifications

[General]	Power supply		AC 120V, 60Hz	
	Power consumption		80 W	
	Mass		4.6 kg	
	External dimensions (W x H x D)		360 x 72 x 350 mm	
	Operating conditions		Temperature: 5°C to 35°C, Operation status: Horizontal	
	Operating humidity		5% to 85%	
[CD/DVD]	Laser		Semiconductor laser, wavelength 650 nm	
	Signal system		PAL 625/50, NTSC 525/60	
	Frequency response (audio)		4 Hz to 20 kHz	
	Signal-to-noise ratio (audio)		More than 75 dB (1 kHz, NOP, 20 kHz LPF/A-Filter)	
	Dynamic range (audio)		More than 70 dB	
	Harmonic distortion (audio)		0.5 % (1 kHz, at 12W position) (20 kHz LPF/A-Filter)	
[Video]	Video input		1.0 V (p-p), 75 Ω, negative sync., RCA jack	
	Video output		1.0 V (p-p), 75 Ω, negative sync., RCA jack	
	S-video output		(Y) 1.0 V (p-p), 75 Ω, negative sync., Mini DIN 4-pin x 1 (C) 0.3 V (p-p), 75 Ω	
	Component video output		(Y) 1.0 V (p-p), 75 Ω, negative sync., RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω	
[Tuner]	FM	Tuning Range		87.5 - 108 MHz
		Intermediate Frequency		10.7 MHz
		Signal-to Noise Ratio		60 dB
	AM (MW)	Frequency Response		150 - 10,000 Hz
		Tuning Range		530 - 1,720 kHz
		Intermediate Frequency		450 kHz
[Amplifier]	Stereo mode		50W + 50W (8 Ω at 1 kHz, THD 10 %)	
	Surround mode (* Depending on the sound mode settings and the source, there may be no sound output.)		Front: 50W + 50W (THD 10 %) Center*: 50W Surround*: 50W + 50W (8Ω at 1 kHz, THD 10 %) Subwoofer*: 80W (4Ω at 30 Hz, THD 10 %)	
	Inputs		VIDEO 1, VIDEO 2, OPTICAL AUDIO	
	Outputs		VIDEO 1 (AUDIO OUT) : 2 V WOOFER: 2 V PHONES: (32 Ω, 0.9W)	
[Speakers]			Satellite Speaker (FE-5620TE)	Passive Subwoofer (FE-5620WE)
	Type		2 Way 2 Speaker	1 Way 1 Speaker
	Impedance		8 Ω	4 Ω
	Frequency Response		110 - 40,000 Hz	40 - 1,500 Hz
	Sound Pressure Level		83 dB/W (1m)	82 dB/W (1m)
	Rated Input Power		50W	80 W
	Max. Input Power		100 W	160 W
	Net Dimensions (W x H x D)		100 x 147 x 127.5 mm	200 x 425 x 381 mm
	Net Weight		0.92 kg	7.06kg
[Supplied Accessories]	<ul style="list-style-type: none"> <li>• Audio cable .....1</li> <li>• Speakers .....6</li> <li>• Remote control .....1</li> <li>• AM loop antenna .....1</li> </ul>			
	<ul style="list-style-type: none"> <li>• Video cable .....1</li> <li>• Speaker cables .....5</li> <li>• Batteries (AAA) .....2</li> <li>• FM antenna .....1</li> </ul>			

\* Designs and specifications are subject to change without notice.

## ZENITH ELECTRONICS CORPORATION LIMITED WARRANTY (USA)

Zenith will repair or replace your product, at Zenith's option, if it proves to be defective in material or workmanship under normal use during the warranty period listed below from the date of original consumer purchase. **This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the United States, excluding US Territories.**

### WARRANTY PERIOD

WARRANTY PERIOD	HOW SERVICE IS HANDLED
<b>Labor:</b> 90 Days from date of purchase	Carry-in service. Please retain your bill of sale for proof of warranty. <b>Please call 1-877-9ZENITH (1-877-993-6484) to locate your nearest Zenith Authorized Service Center.</b> Please see below for further information.
<b>Parts:</b> One Year from the date of purchase	

**THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESSED WARRANTY PERIOD ABOVE. ZENITH WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION LOST PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state-to-state.

### THE ABOVE WARRANTY DOES NOT APPLY TO:

1. To damages or problems that result from shipping, installation, calibration, maintenance, or separate system components.
2. To damages or problems that result from misuse, abuse, operation outside environmental specifications or contrary to the requirements and precautions in the Operating Guide, accident, lightning strikes or other natural causes, modification or alteration, incorrect electrical current or voltage, signal reception or input, software not licensed directly by Zenith, software errors that do not disable functionality, operating and software protocols adopted after date of manufacturer or for outside the US, or institutional or commercial use.

**Therefore, the cost of repair or replacement is borne by the customer.**

### CUSTOMER ASSISTANCE NUMBERS:

<b>To Prove Warranty Coverage:</b> →	<b>Retain your Sales Receipt to prove date of purchase.</b> A copy of your Sales Receipt must be submitted at the time warranty service is provided.
<b>To Obtain Where-To-Buy, nearest Authorized Service Center, Product Assistance, or Customer Assistance:</b> →	Call <b>1-877-9ZENITH (1-877-993-6484)</b> and choose the appropriate prompt. (Mon. ~ Fri. 7 a.m. ~ 8 p.m. and Sat. 8 a.m. to 5:00 p.m. CT) or visit our website at <b><a href="http://www.zenithservice.com">http://www.zenithservice.com</a></b>

ZENITH ELECTRONICS CORPORATION  
2000 MILLBROOK DRIVE  
LINCOLNSHIRE, IL 60069

Zenith Part No. 206-3823  
GS# 3828R-D020Q  
Printed in China  
Issue O